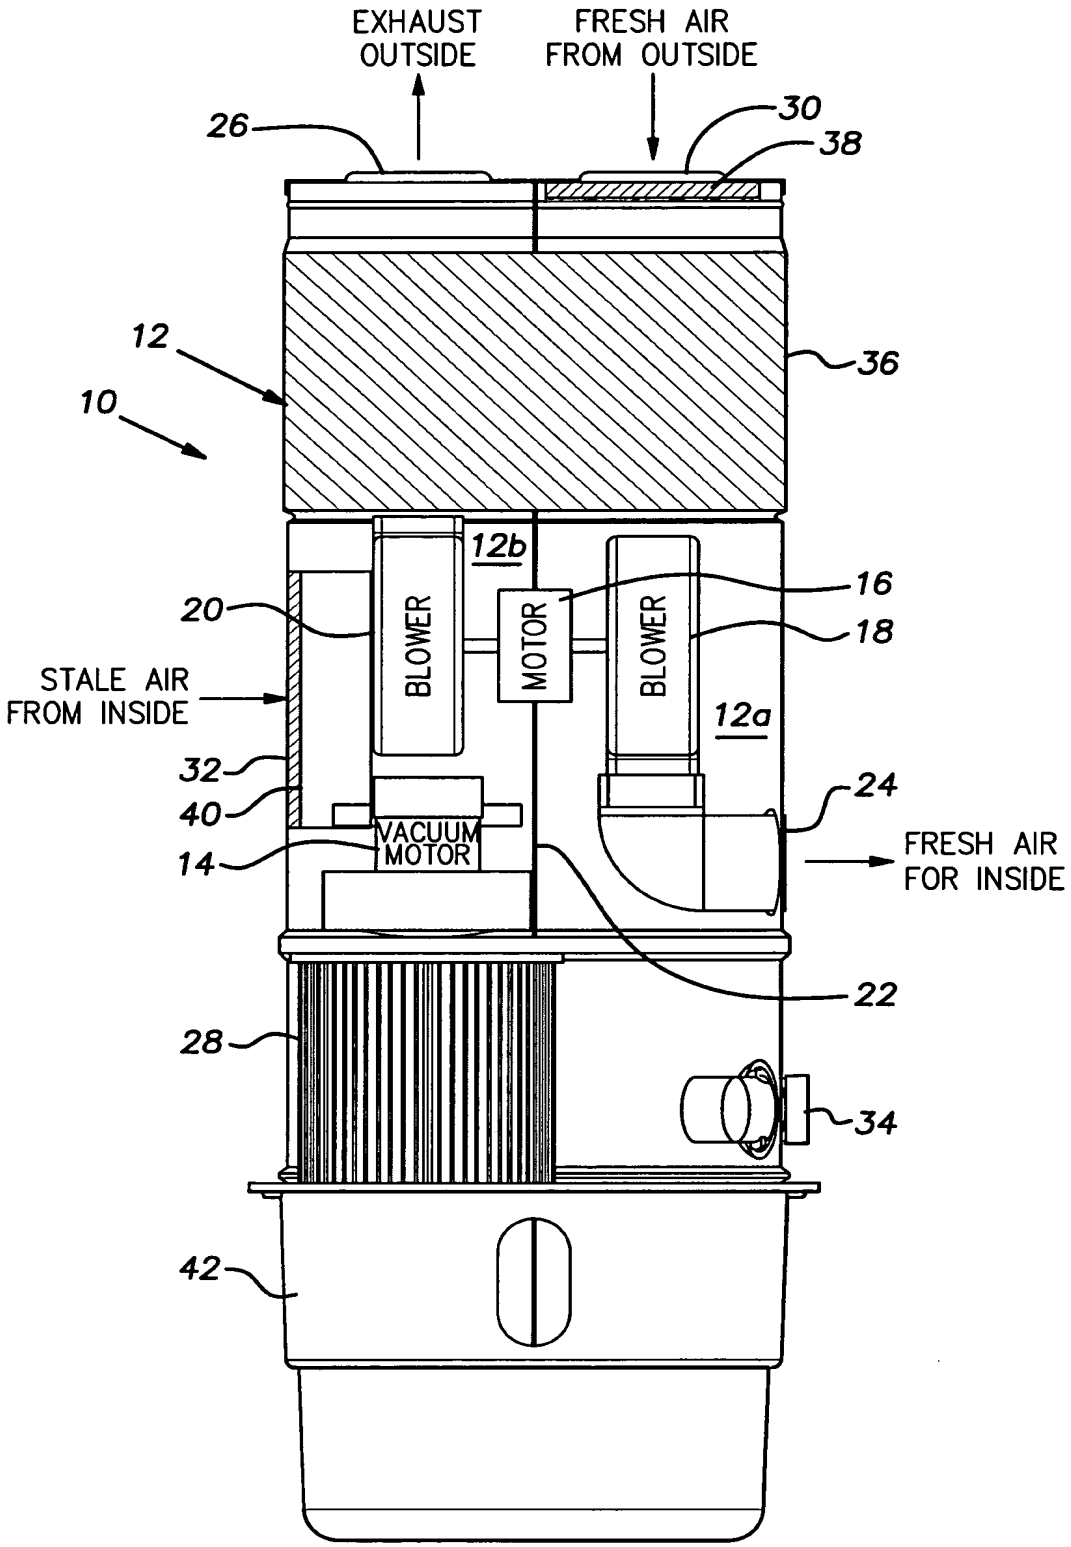
EXHAUST
OUTSIDE
FRESH AIR
FROM OUTSIDE
26
30
38
12
10
36
12b
BLOWER
MOTOR
BLOWER
16
18
20
STALE AIR
FROM INSIDE
12a
32
24
40
VACUUM
MOTOR
14
FRESH AIR
FOR INSIDE
22
28
34
42

FIG. 1